

347. Axle Differential Assembly

Fig. No.	Ref. letter	Point of measurement	Sizes and fits of new parts
248	J-K	Drive gear to drive pinion backlash...	0.005 to 0.008
248	A	Diameter of side gear pilot in case and case cover.	2.193 to 2.195
248	B	Thickness of side gear thrust washers.	0.058 to 0.062
248	C	Diameter of side gear pilot.....	2.189 to 2.191
248	D	Diameter of spider pinion bore.....	0.880 to 0.881
248	F-D	Fit of spider arm in spider pinion....	0.005L to 0.007L
248	E	Thickness of spider pinion thrust washer.	0.058 to 0.062
248	F	Diameter of spider arms.....	0.874 to 0.875
248	G	Thickness of thrust pad.....	0.1845 to 0.1885
248	H	Outside diameter of flange sleeve....	2.599 to 2.601

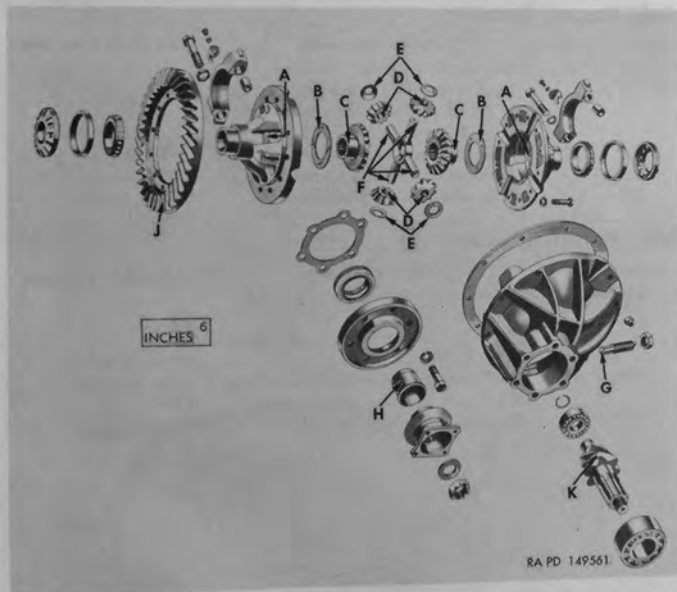


Figure 248. Repair and rebuild standard points of measurement for axle differential assembly.

348. Service Brakes

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
249	A	Backing plate flange—runout not to exceed (total dial indicator reading).....	0.010
249	B	Diameter of anchor pin.....	0.866 to 0.868
249	C	Diameter of anchor pin bore in anchor block.....	0.877 to 0.879
249	B-C	Fit of anchor pin in anchor block.....	0.009L to 0.013L
249	D	Brake shoe return spring:	
		Free length.....	5 $\frac{1}{16}$
		Working load when compressed to 5 $\frac{1}{16}$	50 to 60 lb

349. Master Cylinder

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
250	B	Piston return spring:	
		Approximate free length.....	4 $\frac{11}{16}$
		Working load when compressed to 2 $\frac{3}{8}$ in.....	11 $\frac{1}{4}$ to 12 $\frac{1}{4}$ lb
250	C	Inside diameter of cylinder bore.....	1.750 to 1.753
		Maximum diameter after honing.....	1.757
250	A-C	Fit of piston in cylinder bore.....	0.005L (max)

350. Wheel Cylinders

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
251	B	Piston return spring:	
		Approximate free length.....	2 $\frac{7}{8}$
		Working load when compressed to 1 $\frac{3}{8}$	2 $\frac{1}{4}$ to 3 $\frac{1}{4}$ lb
251	C	Inside diameter of cylinder body bore.....	1.250 to 1.253
		Maximum diameter after honing.....	1.257
251	A-C	Fit of piston in cylinder body bore.....	0.005L (max)

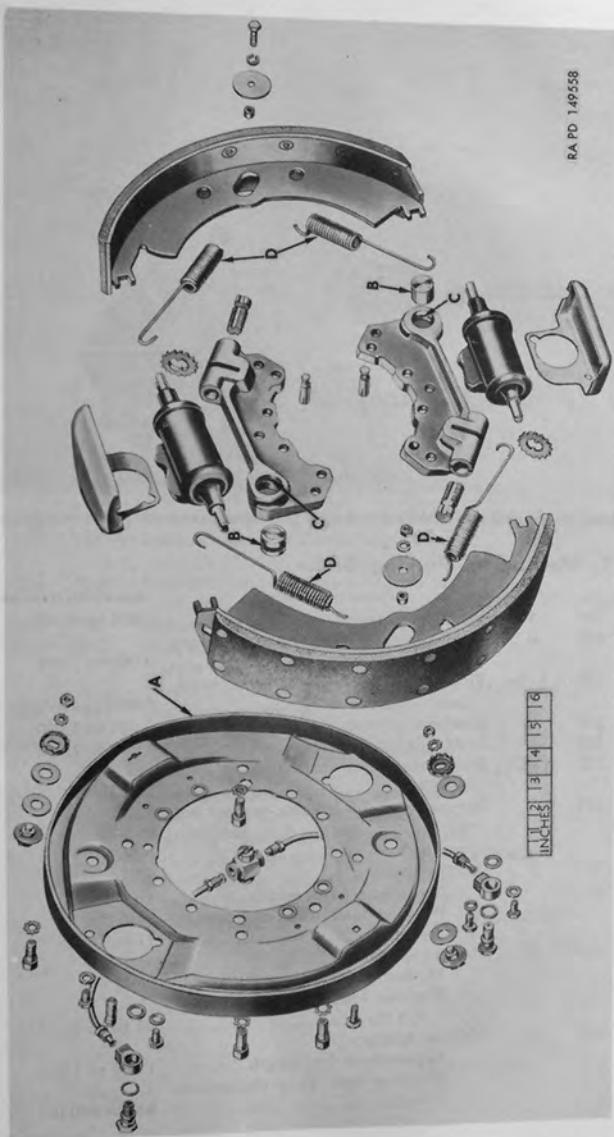


Figure 249. Repair and rebuild standard points of measurement for service brakes.

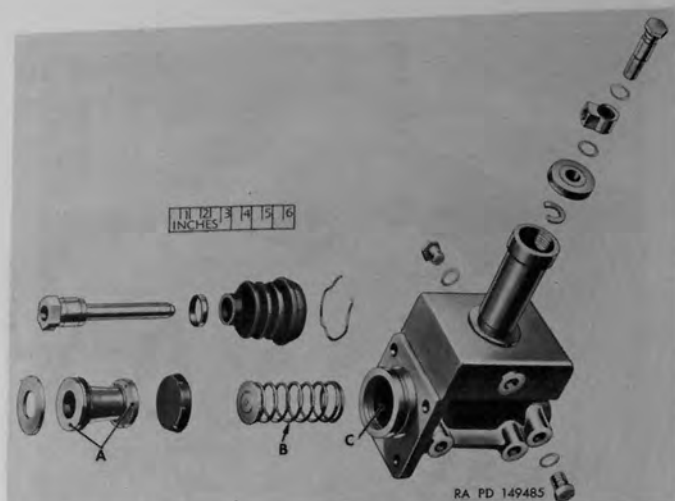


Figure 250. Repair and rebuild standard points of measurement for master cylinder.

351. Mechanical Parking Brake

Fig. No.	Ref. letter	Point of measurement	Sizes and fits of new parts
252	A	Diameter of special pin.....	0.996 to 0.998
252	B	Inside diameter of lever bracket bearing.....	0.999 to 1.001
252	A-B	Fit of special pin in lever bracket bearing.....	0.001L to 0.005L
252	C	Diameter of relay lever shaft.....	0.997 to 1.000
252	D	Inside diameter of relay lever bearing.....	1.002 to 1.003
252	C-D	Fit of relay lever shaft in relay lever bearing.....	0.003L to 0.005L
252	E	Runout of drum braking surface not to exceed (total dial indicator reading).....	0.005
252	F	Anchor spring:	
		Approximate free length.....	1 $\frac{1}{16}$
		Working load when compressed to $\frac{3}{4}$	11 to 15 lb
252	G	Release springs:	
		Approximate free length.....	2 $\frac{11}{16}$
		Working load when compressed to 1 $\frac{1}{2}$	25 to 35 lb
252	H	Tension spring:	
		Approximate free length.....	1.360 to 1.390
		Working load when compressed to $\frac{1}{4}$	600 to 800 lb



Figure 251. Repair and rebuild standard points of measurement for wheel cylinders.

352. Temporary (Electric) Parking Brake Valve

Fig. No.	Ref. letter	Point of measurement	Sizes and fits of new parts
178	B	Check valve spring:	
		Approximate free length.....	1 $\frac{1}{16}$
		Working load when compressed	
		to $\frac{1}{32}$	2 $\frac{3}{4}$ to 3 $\frac{1}{4}$ lb

353. Steering Gear Assembly

Fig. No.	Ref. letter	Point of measurement	Sizes and fits of new parts
253	A	Inside diameter of Pitman shaft bearing (inside cover).....	1.1255 to 1.1260
253	B	Outside diameter of Pitman arm shaft.....	1.1235 to 1.1240
253	B-A	Fit of Pitman arm shaft in bearing (in side cover).....	0.0015L to 0.0025L
253	C	Outside diameter of Pitman arm shaft.....	1.3750 to 1.3755
253	D	Inside diameter of Pitman shaft bearing (in housing).....	1.379 to 1.3795
253	C-D	Fit of Pitman arm shaft in bearing (in housing).....	0.0035L to 0.0045L
253	E	Diameter of balls.....	$\frac{9}{32}$
253	F-G	Clearance between end of adjusting screw and notch in Pitman arm shaft.....	0.002 (max)
253	H	Shaft bearing spring:	
		Free length.....	$\frac{3}{4}$
		Working load when compressed	
		to $\frac{1}{2}$ to $\frac{3}{8}$	25 to 35 lb
		Backlash between Pitman arm shaft teeth and worm ball nut teeth—pounds pull on steering wheel through center (par. 264d).....	2 $\frac{1}{2}$ to 3 lb
		Worm bearing adjustment—pounds pull to keep steering wheel moving (par. 264c).....	1 $\frac{1}{2}$ to 2 lb.


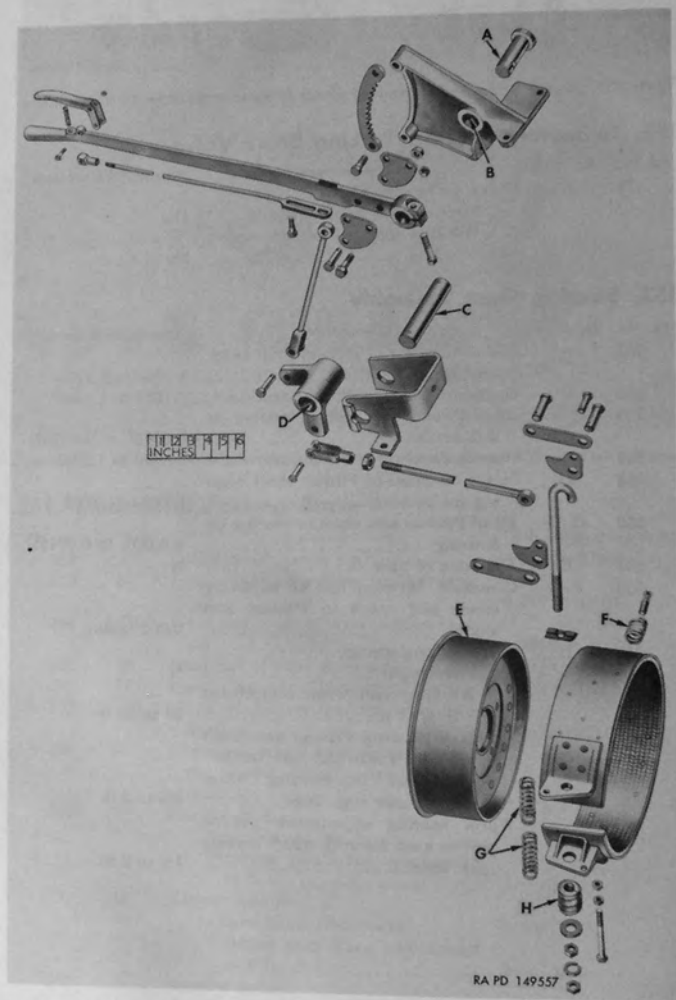


Figure 252. Repair and rebuild standard points of measurement for mechanical parking brake.

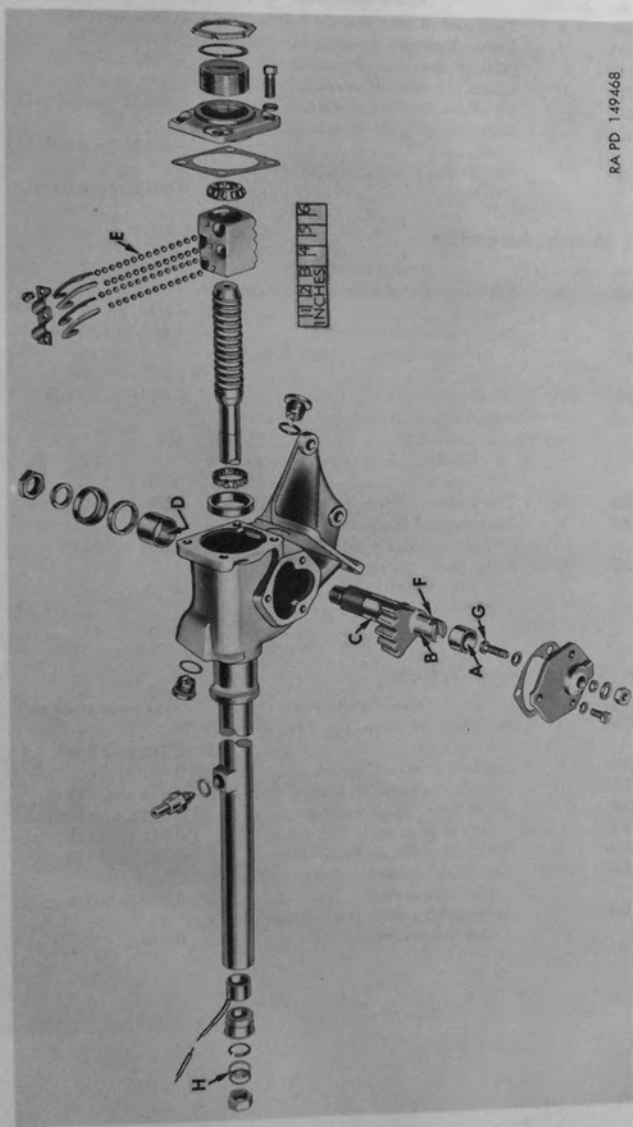

RA PD 149468

Figure 253. Repair and rebuild standard points of measurement for steering gear assembly.

354. Front Spring Suspension Components

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
254	A	Diameter of rear shackle bolt	0.7465 to 0.7475
254	B	Inside diameter of spring eye bearing	0.749 to 0.754
254	C	Outside diameter of shackle pin	0.7465 to 0.7475
254	D	Inside diameter of shackle bearing	0.749 to 0.752
254	A-D	Fit of shackle bolt in shackle bearing	0.0015L to 0.0055L
254	C-B	Fit of shackle pin in spring eye bearing	0.0015L to 0.0075L
		Fit of shock absorber piston in cylinder	0.0014L to 0.0025L

355. Winch Assembly

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
255	A	Free length of clutch control lever ball spring	11/16
255	B	Diameter of drum shaft	1.873 to 1.875
255	C	Inside diameter of bushing type bearings	1.877 to 1.880
255	B-C	Fit of drum shaft in bearings	0.002L to 0.007L
255	D	Automatic brake adjusting spring:	
		Free length	1½
		Working load when compressed to 1	50 lb
255	E	Thickness of drum thrust ring	0.486 to 0.490
255	F	Thickness of end frame bearing thrust ring (at outer edge)	0.240 to 0.250
255	G	Drag brake spring:	
		Free length	2
		Working load when compressed to 1½	48 lb

356. Winch Drive System

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Point of measurement</i>	<i>Sizes and fits of new parts</i>
256	A	Diameter of shear pin hole in front fixed yoke	0.312 to 0.314
256	B	Inside diameter of bearings	0.627 to 0.629
256	C	Outside diameter of journal arms	0.623 to 0.625
256	B-C	Fit of bearings on journals	0.002L to 0.006L
256	D	Width of grooves in slip yoke	0.311 to 0.313
256	E	Width of teeth on drive shafts	0.308 to 0.310
256	D-E	Backlash between drive shaft and slip yoke splines	0.001 to 0.005
256	F	Drive shaft runout not to exceed (total dial indicator reading)	0.010

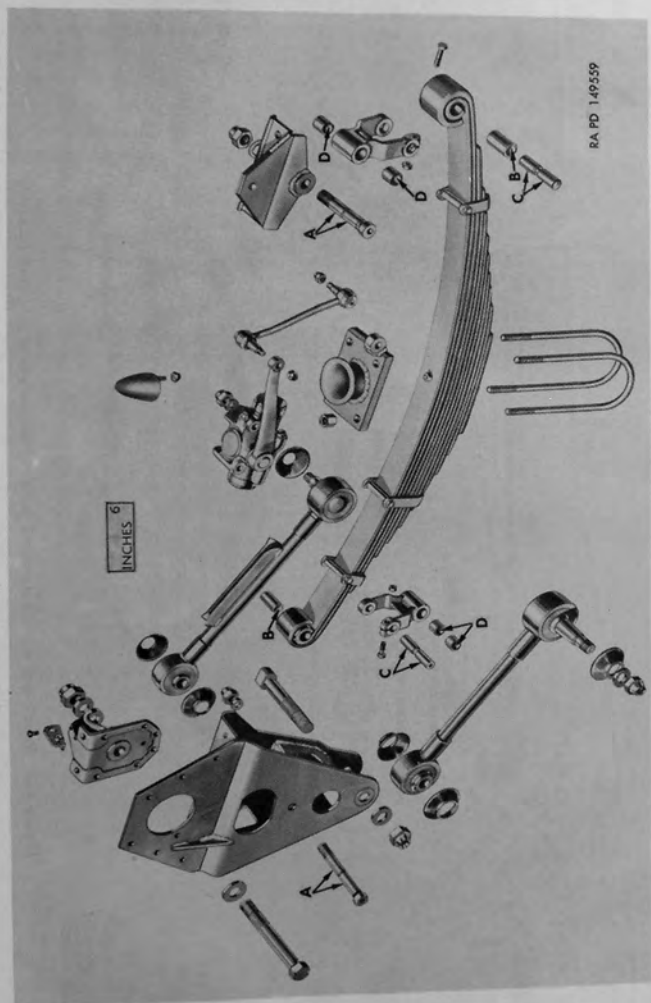


Figure 254. Repair and rebuild standard points of measurement for front spring suspension components.

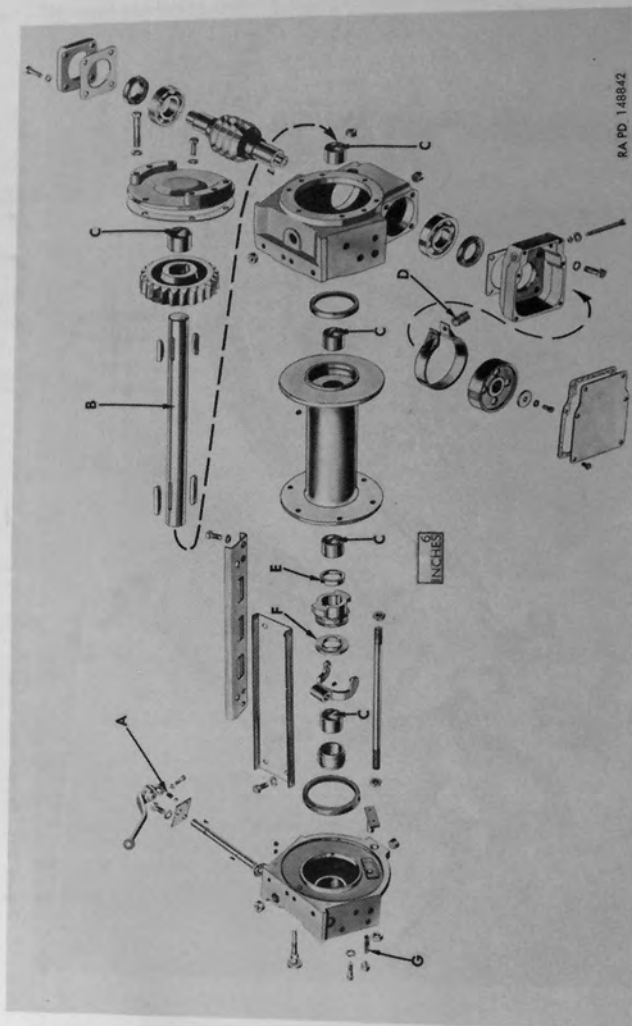


Figure 255. Repair and rebuild standard points of measurement for winch assembly.

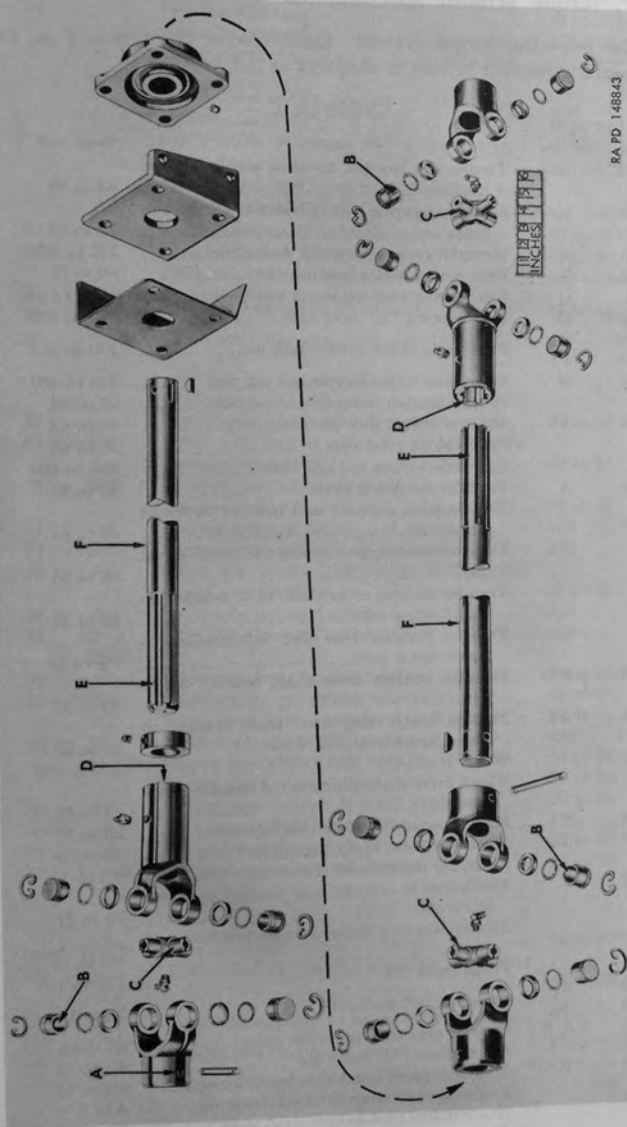


Figure 256. Repair and rebuild standard points of measurement for winch drive line components.

357. Torque Wrench Specifications

The following torque wrench specifications are itemized in the sequence appearing in text in chapters as indicated.

CHAPTER 4

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Location</i>	<i>Torque (lb-ft)</i>
33	A	Torque rod bracket to cross member screw nuts.....	33 to 43
35	E	Secondary spring seat to frame bracket screw nuts.....	33 to 43
35	A	Secondary rear spring "U" bolt nuts.....	375 to 400
39	N	Rear spring seat adjusting nut.....	60 to 75
39	Q	Rear spring seat adjusting nut (lock).....	100 to 150
29	D	Front spring "U" bolt nuts.....	170 to 200
29	B	Front axle upper torque bolt nut.....	190 to 250
30	F		
29	H	Front axle upper torque rod pin nut.....	350 to 400
		Shock absorber mounting screw nut.....	63 to 84
29	F	Shock absorber link pin nuts.....	48 to 64
		Pillow block stud nuts.....	48 to 64
		Rear axle torque rod pin nuts.....	350 to 400
28	A	Transfer mounting bolts.....	60 to 85
		Transmission support and bracket to frame screw nuts.....	48 to 64
		Transmission support bracket to frame screw nuts.....	48 to 64
		Transfer reverse cross shaft right bracket to frame screw nuts.....	20 to 27
		Transfer reverse cross shaft left bracket to frame screw nuts.....	9½ to 13
36	A & D	Transfer control cross shaft bracket screw nut.....	20 to 27
36	B & C	Parking brake relay lever shaft bracket to frame screw nuts.....	20 to 27
		Wheel stud nuts.....	300 to 350
		Winch drive shaft pilot bearing bracket screw nuts.....	48 to 64
26	C	Brake master cylinder to bracket screw nuts.....	20 to 27
26	A	Master cylinder brake line connector bolt.....	20 to 30
		Air-hydraulic cylinder to end plate bolts.....	9½ to 13
27	F	Air-hydraulic cylinder rear bracket to frame screw nuts.....	20 to 27
		Air-hydraulic cylinder to rear bracket stud nut.....	9½ to 13
		Pitman arm nut.....	115 to 155
25	C	Drag link ball stud nuts.....	75 to 100
124	A		
25	A & B	Steering gear to frame screw nuts.....	48 to 64
		Air reservoir "U" bolt nuts.....	9½ to 13
41	P	Muffler support bracket to frame screw nuts.....	9½ to 13
		Engine ground strap to frame screw nut.....	5 to 7
		Rear exhaust pipe hanger strap screw nut.....	20 to 27
		Steering column bracket cap screw nut.....	20 to 27

Fig. No.	Ref. letter	Location	Torque (lb-ft)
198	S	Steering wheel nut.....	40 to 55
		Brake upper pedal to lower pedal screw nut..	20 to 27
17	A, B, C, & F.	Winch support brackets to frame screw nuts.....	95 to 127
		Spare wheel carrier bracket to frame screw nuts.....	48 to 64
		Spare wheel to carrier swivel bracket stud nuts.....	230 to 300
		Spare wheel carrier swivel bracket to lock bracket stud nut.....	250 to 300
24	B	Fuel tank support to frame screw nut.....	20 to 27
37	A	Rear bumper to frame screw nut.....	48 to 64
		Pintle bracket to frame screw nuts.....	165 to 220
37	B}	Tail light bracket to frame screw nuts.....	48 to 64
38	A}		
46	D	Cargo body rear mounting screw nuts.....	165 to 220

CHAPTER 5

67	-----	Output gear rear bearing lock sleeve screw...	20 to 25
52	AH	Front axle output shaft front bearing re- tainer cap screws.....	20 to 25
52	NN	Forward rear axle output shaft rear retainer cap screws.....	20 to 25
52	AS	Bearing lock nut (min).....	100
52	KK	Forward rear axle output shaft (min).....	130
52	AE	Front axle output shaft front bearing sup- port cap screws.....	20 to 25
52	AL	Front axle output shaft flange nut (min)....	130
52	BF & CC	Idler shaft bearing lock nuts (min).....	100
52	AZ	Idler shaft front bearing retainer cap screws..	20 to 25
52	BK	Speedometer driven gear assembly.....	30 to 35
52	BT	Input shaft front bearing retainer screws....	20 to 25
52	BQ	Input shaft flange nut (min).....	130
54	F	Sliding gear shifter fork bolt.....	15 to 20
		Shifter shaft support bolts.....	20 to 25
52	FF	Output gear bearing retainer screws.....	20 to 25
52	P	Output gear flange nut (min).....	100
80	B	Power take-off opening cover screws.....	20 to 25
80	C & B	Transfer case cover cap screws.....	20 to 25

CHAPTER 7

109	P & N	Trunnion bearing nuts or spacers.....	70 to 80
132	AA	Differential and carrier assembly to housing stud nuts.....	45 to 55
121	E}	Axle housing cover to housing stud nuts....	45 to 55
148	G}		
130	-----	Tie rod end stud nuts.....	175 to 200

CHAPTER 8

<i>Fig. No.</i>	<i>Ref. letter</i>	<i>Location</i>	<i>Torque (lb-ft)</i>
132	PP	Oil seal retainer cap screws.....	160 to 180
132	JJ	Drive pinion nuts (at axles).....	160 to 280
132	W	Drive gear cap screws.....	85 to 95
132	D	Differential bearing cap screws.....	130 to 160
132	AA	Differential carrier stud nuts.....	45 to 55
148	G	Axle housing cover std nut.....	45 of 55

CHAPTER 9

154	A	Pillow block shaft nuts.....	175 to 225
-----	---	------------------------------	------------

CHAPTER 10

182	U	Brake drum to adapter stud nuts.....	20 to 27
168	G	Master cylinder filler pipe.....	75 to 80
168	N	Master cylinder filler cap bolt (max).....	30

CHAPTER 11

178	A	Parking brake valve outlet plug.....	145 to 155
-----	---	--------------------------------------	------------

CHAPTER 12

182	V	Hub drive flange studs.....	50 to 60
182	D	Wheel bearing adjusting nuts.....	60 to 75
182	B	Wheel bearing adjusting nuts (lock).....	100 to 150
		Rear axle shaft or front hub drive flange stud nuts.	55 to 65

CHAPTER 13

198	S	Steering wheel nut.....	40 to 55
		Pitman arm nut.....	115 to 155

CHAPTER 15

214	AA	Rear spring seat shaft safety nut.....	650 to 700
-----	----	--	------------

APPENDIX

REFERENCES

1. Publication Indexes

The following publication indexes and lists of current issue should be consulted frequently for latest changes or revisions of references given in this appendix and for new publications relating to matériel covered in this manual:

Index of Administrative Publications.....	SR 310-20-5
Index of Army Motion Pictures and Film Strips and Kinescope Recordings.....	SR 110-1-1
Index of Blank Forms and Army Personnel Classification Tests.....	SR 310-20-6
Index of Technical Manuals, Technical Regulations, Technical Bulletins, Supply Bulletins, Lubrication Orders and Modification Work Orders.....	SR 310-20-4
Index to Tables of Organization and Equipment, Reduction Tables, Tables of Organization, Tables of Equipment, and Tables of Allowances.....	310-20-7
Index of Training Publications.....	SR 310-20-3
Introduction and Index (supply catalogs).....	ORD 1
Military Training Aids.....	FM 21-8
Ordnance Major Items and Major Combinations and Pertinent Publications.....	SB 9-1

2. Supply Catalogs

The following catalogs of the Department of the Army Supply Catalog pertain to this matériel:

<i>a. Destruction to Prevent Enemy Use.</i>	
Land Mines and Fuzes, Demolition Material, and Ammunition for Simulated Artillery and Grenade Fire.....	ORD 11 SNL R-7
<i>b. Repair and Rebuild.</i>	
Antifriction Bearings and Related Items.....	ORD 5 SNL H-12
Cleaners, Preservatives, Lubricants, Recoil Fluids, Special Oils, and Related Maintenance Materials.....	ORD 3 SNL K-1

Electrical Fittings-----	ORD 5 SNL H-4
Items of Soldering, Metallizing, Brazing and Weld- ing Materials: Gases and Related Items-----	ORD 3 SNL K-2
Lubricating Equipment, Accessories and Related Dispensers-----	ORD (*) SNL K-3
Lubricating Fittings, Oil Filters, and Oil Filter Elements-----	ORD 5 SNL H-16
Major Items and Major Combinations of Group G-----	ORD 3 SNL G-1
Miscellaneous Hardware-----	ORD 5 SNL H-2
Oil Seals-----	ORD 5 SNL H-13
Pipe and Hose Fittings-----	ORD 5 SNL H-6
Shop Set, Auto Fuel and Electrical System, Field Maintenance-----	ORD 6 SNL J-8, Sec. 12
Shop Set, Contact and Emergency Repair, Field Maintenance-----	ORD 6 SNL J-8, Sec. 18
Shop Set, Engine and Power Train Rebuild Company (Armament), Depot Mainte- nance-----	ORD 6 SNL J-9, Sec. 8
Shop Set, Engine Rebuild Company (Auto- motive), Depot Maintenance-----	ORD 6 SNL J-9, Sec. 3
Shop Set, Headquarters and Service Com- pany, Depot Maintenance, Automotive or Armament-----	ORD 6 SNL J-9, Sec. 2
Shop Set, Maintenance (Field) Automotive-----	ORD 6 SNL J-8, Sec. 13
Shop Set, Power Train Rebuild Company (Automotive), Depot Maintenance-----	ORD 6 SNL J-9, Sec. 1
Shop Set, Tire Rebuild Company, Depot Maintenance-----	ORD 6 SNL J-9, Sec. 10
Standard Hardware-----	ORD 5 SNL H-1
Tool Set, Auto Fuel and Electrical System Repairman-----	ORD 6 SNL J-10, Sec. 8
Tool Set, Canvas and Leather Repairman-----	ORD 6 SNL J-10, Sec. 15
Tool Set, General Mechanic's-----	ORD 6 SNL J-10, Sec. 4
Tool Set, Maintenance (Field), Motor Vehi- cle Assembly Company-----	ORD 6 SNL J-8, Sec. 7
Tool Set, Metal Body Repairman-----	ORD 6 SNL J-10, Sec. 7
Tool Set, Tire Rebuilder and Inspector-----	ORD 6 SNL J-10, Sec. 11
Tool Set, Vulcanizer's-----	ORD 6 SNL J-10, Sec. 12
<i>c. Vehicle.</i>	
Truck, Cargo, 2½-Ton, 6 x 6, M135-----	ORD (*) SNL G-749

*See ORD 1 for published catalogs of the ordnance section of the Department of the Army Supply Catalog.

3. Forms

The following forms pertain to this matériel :

WD AGO Form 9-1,	Matériel Inspection Tag
DA Form 9-3,	Processing Record for Storage and Shipment (Tag) and Boxed Engines
WD AGO Form 9-4,	Vehicular Storage and Servicing Record (Card)
DA Form 9-68,	Spot Check Inspection Report for Wheeled and Half-Track Vehicles
WD AGO Form 9-71,	Locator and Inventory Control Card
WD AGO Form 9-72,	Ordnance Stock Record Card
DA Form 9-76,	Request for Work Order
DA Form 9-77,	Job Order Register
WD AGO Form 9-78,	Job Order
DA Form 9-79,	Parts Requisition
WD AGO Form 9-80,	Job Order File
WD AGO Form 9-81,	Exchange Part or Unit Identification Tag
DA Form 447,	Property Turn-In Slip
DA Form 460,	Preventive Maintenance Roster
DA Form 461,	Preventive Maintenance Service and Inspection for Wheeled and Half-Track Vehicles
DA Form 461-5,	Limited Technical Inspection
DA Form 446,	Issue Slip
DA Form 468,	Unsatisfactory Equipment Report
DA Form 478,	MWO and Major Unit Assembly Replacement Record and Organizational Equipment File
DA Form 811,	Work Request and Job Order
DA Form 811-1,	Work Request and Hand Receipt
WD AGO Form 865,	Work Order
WD AGO Form 866,	Consolidation of Parts
WD AGO Form 867,	Status of Modification Work Order
DD Form 6,	Report of Damaged or Improper Shipment
DD Form 317,	Preventive Maintenance Service Due (Sticker)

4. Other Publications

The following explanatory publications contain information pertinent to this matériel and associated equipment:

a. *Camouflage.*
Camouflage, Basic Principles-----FM 5-20

Camouflage of Vehicles.....	FM 5-20B
<i>b. Decontamination.</i>	
Decontamination.....	TM 3-220
Decontamination of Armored Force Vehicles.....	FM 17-59
Defense Against Chemical Attack.....	FM 21-40
<i>c. Destruction to Present Enemy Use.</i>	
Explosives and Demolitions.....	FM 5-25
Ordnance Service in the Field.....	FM 9-5
<i>d. General.</i>	
Cooling Systems: Vehicles and Powered Ground Equip- ment.....	TM 9-2858
Disposal of Supplies and Equipment: Uneconomically	
Repairable Ordnance Vehicles.....	SR 755-105-5
Fuels and Carburetion.....	TM 10-550
Inspection of Ordnance Matériel in the Hands of Troops.....	TM 9-1100
Lubrication Order.....	
Military Vehicles.....	TM 9-2800
Motor Vehicles (Ordnance Corps Responsibility).....	AR 700-105
Ordnance Field Maintenance.....	FM 9-10
Precautions in Handling Gasoline.....	AR 850-20
Prevention of Motor Vehicle Accidents.....	SR 385-155-1
Principles of Automotive Vehicles.....	TM 9-2700
Report of Accident Experience.....	SR 385-10-40
Storage Batteries, Lead-Acid Type.....	TM 9-2857
Supplies and Equipment: Unsatisfactory Equipment Report.....	SR 700-45-5
<i>e. Repair and Rebuild.</i>	
Abrasives, Cleaning, Preserving, Sealing, Adhesive, and Related Materials Issued for Ordnance Matériel.....	TM 9-850
Body and Components of 2½ Ton 6 x 6 Water tank Truck M50, Gasoline Truck M49, and Tractor Truck M48.....	TM 9-1819D
Dump Body and Controls for 2½-Ton 6 x 6 Dump Truck M47.....	TM 9-1819C
Electrical Equipment (Bendix-Scintilla).....	TM 9-1825E
Ordnance Maintenance: Engine (GMC Model 302).....	TM 9-1819AA
Hand, Measuring, and Power Tools.....	TM 10-590
Instruction Guide: Care and Maintenance of Ball and Roller Bearings.....	TM 37-265
Lubrication.....	TM 9-2835
Lubrication Order.....	LO 9-819A
Maintenance and Care of Hand Tools.....	TM 9-867
Maintenance and Care of Pneumatic Tires and Rubber Treads.....	TM 31-200

Maintenance of Supplies and Equipment: Maintenance Responsibilities and Shop Operation.....	AR 750-5
Modification of Ordnance Matériel.....	SB 9-38
Ordnance Maintenance: Carburetors (Holley).....	TM 9-1826D
Ordnance Maintenance: Electrical Equipment (Auto-Lite).....	TM 9-1825B
Ordnance Maintenance: Electrical Equipment (Delco-Remy).....	TM 9-1825A
Ordnance Maintenance: Fuel Pumps.....	TM 9-1828A
Ordnance Maintenance: Power Brake Systems.....	TM 9-1827A
Ordnance Maintenance: Speedometers, Tachometers, and Recorders.....	TM 9-1829A
Ordnance Maintenance: Vacuum Brake System.....	TM 9-1827B
Ordnance Maintenance: Vehicular Maintenance Equipment, Grinding, Boring, Valve Reseating Machines, and Lathes.....	TM 9-1834A
Ordnance Maintenance, Hydra-Matic Transmission (GMC Model 302M).....	TM 9-1819AB
Painting Instructions For Field Use.....	TM 9-2851
Uneconomically Repairable Ordnance Vehicles.....	SR 755-105-5
Power Train, Body, and Frame for 20½-Ton 6 x 6 Cargo Truck M34, M35, M36, M44, M45, M46, M47, M48, M49, M50, M108, and M109.....	TM 9-1819B
Preparation of Ordnance Matériel for Deep-Water Fording.....	TM 9-2853
Preventive Maintenance of Electric Motors and Generators.....	TM 55-405
Wheeled and Half-Track Vehicles, Trailers, and Towed Artillery: Lubrication of Wheel Bearings.....	TB 9-2835-12
<i>f. Operation.</i>	
2½-Ton 6 x 6 Cargo Truck M135.....	TM 9-819A
<i>g. Shipment and Stand-By or Long-Term Storage.</i>	
Army Shipping Document.....	TM 38-705
Instruction Guide: Ordnance Packaging and Shipping (Posts, Camps, and Stations).....	TM 9-2854
Marking and Packing of Supplies and Equipment:	
Marking of Oversea Supply.....	SR 746-30-5
Military Standard—Marking of Shipments.....	MIL-STD-129**
Ordnance Storage and Shipment Chart—Group G.....	TB 9-OSSC-G
Preparation of Supplies and Equipment for Shipment:	
Processing of Unboxed and Uncrated Equipment for Oversea Shipment.....	AR 747-30

**Copies may be obtained from Aberdeen Proving Ground, Aberdeen, Md.

Processing of Motor Vehicles and Related Unboxed Matériel for Shipment and Storage.....	SB 9-4
Preservation, Packaging, and Packing of Military Supplies and Equipment.....	TM 38-230
Protection of Ordnance General Supplies in Open Storage.....	TB ORD 379
Shipment of Supplies and Equipment: Report of Damaged or Improper Shipment.....	SR 745-45-5
Standards for Oversea Shipment and Domestic Issue of Ordnance Matériel Other Than Ammunition and Army Aircraft.....	TB ORD 385

INDEX

Absorber, shock (*See Shock absorber*)

Accessory drive, power take-off:

	<i>Paragraph</i>	<i>Page</i>
Description	142	153
Installation	144	155
Rebuild:		
Dump truck accessory drive	149-152	163
Tank truck accessory drive	145-148	155
Removal	143	154
Standards, repair and rebuild	345	407

Adjustments:

Bearings, wheel	256f	291
Drive gear and pinion backlash (axle)	202g	225
Main spring seat bearing	49	60
Steering gear	264	311
Trunnion bearings, steering knuckle	186d	203
Turning angle, front wheel	155	174
Ventilator, cowl	328d	383

Alinement:

Frame	287	336
Front axle	155	174

Allocation, field and depot maintenance

2 14

Axle, front:

Alinement	155	174
Assembly of axle from subassemblies	185-192	201
Data	154	173
Data, alinement	156	177
Description and operation	153	171
Disassembly into subassemblies	157-162	180
Installation	50	62

Rebuild:

Axle shaft and universal joint	164-169	183
Housing	174-179	194
Steering knuckle, support, trunnions, seals, and bearings	170-173	189
Tie rod	180-184	198
Removal	36	49
Standards, repair and rebuild	346	407

Axles, rear:

Assembly of axle from subassemblies	205-209	230
Cleaning and inspection of axle housing and axle shafts	203-204	227
Data	194	209
Description and operation	193	209
Disassembly of axle into subassemblies	195-196	209
Installation	53	64
Removal	37	49

	Paragraph	Page
Axle shaft and universal joint:		
Assembly.....	169	186
Cleaning.....	166	185
Disassembly.....	165	183
Inspection.....	167	185
Installation.....	190	207
Removal.....	159	180
Repair.....	168	186
	256	287
Bearings, hub (wheel).....		
Block, pillow (<i>See</i> Pillow block)		
Body, cargo (<i>See</i> Cargo body)		
Brake drums.....	235	265
Brakes:		
Parking:		
Data.....	243	272
Description.....	242	272
Rebuild of mechanical parking brake.....	244-246	273
Rebuild of temporary (electric) parking brake valve.....	247-252	278
Standards, repair and rebuild.....	351	414
Service:		
Assembly of brake components.....	233	260
Brake drums.....	235	265
Cleaning and inspection of brake components.....	231	258
Data.....	227	251
Description.....	226	248
Disassembly of brake components.....	230	253
Installation of brake assembly.....	234	263
Repair of brake components.....	232	259
Rebuild:		
Brake shoes and drums.....	228-235	251
Master cylinder.....	236-238	265
Wheel cylinders.....	239-241	270
Removal of brake assembly.....	229	252
Standards, repair and rebuild.....	348	412
Bumper:		
Front:		
Installation.....	74	80
Removal.....	17	29
Rear:		
Installation.....	77	81
Removal.....	42	58
Cab:		
Data.....	321	371
Description.....	320	370
Door.....	330-332	384
Installation.....	70	32
Rebuild.....	322-329	371
Removal.....	21	73
Repair.....	322	371
Windshield.....	333, 334	391
Camber, front axle.....	155	174
Cargo body:		
Data.....	336	400
Description.....	335	395

Cargo body—Continued		
	Paragraph	Page
Installation.....	79	82
Patching and welding.....	339	400
Removal.....	16	28
Repair of top paulin and end curtain.....	341	402
Repair of wood parts.....	340	401
Straightening.....	338	400
Caster, front axle.....	155	174
Common tools and equipment.....	9	20
Connectors, bayonet type.....	293	342
Curtain:		
End, cargo body.....	341	402
Rear, cab.....	323	372
Data:		
Alinement, front axle.....	156	177
Axle, front.....	154	173
Axle, rear.....	194	209
Brakes:		
Parking.....	243	272
Service.....	227	251
Cargo body.....	336	400
Frame.....	285	334
Power take-off.....	122	137
Spring suspension:		
Front.....	268	316
Rear.....	279	331
Steering gear.....	258	295
Transfer.....	82	89
Wheels and hubs.....	254	286
Winch and drive line.....	299	348
Differences between models.....	5	18
Differential carrier:		
Assembly.....	202	221
Cleaning.....	199	216
Disassembly.....	198	211
Inspection.....	200	218
Installation:		
Front.....	187	206
Rear.....	206	230
Removal:		
Front.....	162	182
Rear.....	196e	211
Repair.....	201	219
Standards, repair and rebuild.....	347	411
Doors, cab:		
General.....	330	384
Replacement of doors.....	331	384
Replacement of door components.....	332	387
Drag link:		
Description.....	265	314
Inspection and repair.....	266	314
Drive line, winch (See Winch drive line)	235	265
Drum, brake.....		

	Paragraph	Page
Electrical system:	292	341
Data	291	341
Description	295-297	344
Rebuild of horn	293, 294	242
Repair of cable connections	3	15
Forms, records, and reports		
Frame:	287	336
Alinement	285	334
Data	284	334
Description	289	339
Rebuild of pintle	288	337
Repair		
Front axle (<i>See</i> Axle, front)		
Front spring suspension (<i>See</i> Spring suspension, front)		
Fuel tank:		
Installation	76	80
Removal	23	40
Gear, steering (<i>See</i> Steering gear)		
Hood:		
Installation	72	78
Removal	19	30
Horn:		
Assembly	297	344
Description	291b	341
Disassembly	295	344
Inspection	296	344
Housing:		
Front axle:		
Assembly	179	197
Cleaning	176	194
Disassembly	175	194
Inspection	177	196
Repair	178	197
Rear axle:		
Cleaning	203	227
Inspection	204	229
Hubs (<i>See</i> Wheels and hubs)		
Introduction:		
Data	6	19
Description (of vehicles)	4	16
Differences between models	5	18
Field and depot maintenance allocation	2	14
Forms, records, and reports	3	15
Scope	1	1
Lining, brake shoe, replacement	232	259
Major components, removal, and installation:		
Air-hydraulic cylinder:		
Installation	64	67
Removal	31	46
Air reservoir:		
Installation	66	68
Removal	30	45

Major components, removal, and installation—Continued

	Paragraph	Page
Axle, front:		
Installation.....	50	62
Removal.....	36	49
Axles, rear:		
Installation.....	53	64
Removal.....	37	49
Bumper, front:		
Installation.....	74	80
Removal.....	17	29
Cab:		
Installation.....	70	73
Removal.....	21	32
Cargo body:		
Installation.....	79	82
Removal.....	16	28
Carrier, spare wheel:		
Installation.....	75	80
Removal.....	25	43
Controls and brackets installation.....	55-58	65
Control shafts and brackets removal.....	41	54
Exhaust pipe, rear:		
Installation.....	69	73
Removal.....	24	42
Fender and skirt:		
Installation.....	71	78
Removal.....	20	31
Fuel tank:		
Installation.....	76	80
Removal.....	23	40
General.....	15, 44	28, 58
Hood:		
Installation.....	72	78
Removal.....	19	30
Inspection.....	80	82
Lines and wiring harnesses:		
Installation.....	45	58
Removal.....	43	58
Main springs, rear:		
Installation.....	49	60
Removal.....	39	54
Master cylinder:		
Installation.....	62	67
Removal.....	28	45
Muffler:		
Installation.....	67	69
Removal.....	24	42
Power plant:		
Installation.....	68	69
Removal.....	22	37
Propeller shaft:		
Installation.....	59	66
Removal.....	32	46
Removal.....	42	58
Rear bumpers, tow hooks, and pintle removal.....		

	Paragraph	Page
Major components, removal, and installation—Continued		
Rear tow hooks, bumpers, and pintle installation	77	81
Secondary spring:		
Installation	48	60
Removal	40	54
Shock absorber:		
Installation	52	63
Removal	35	48
Spare wheel and carrier:		
Installation	75	80
Removal	25	43
Springs, front:		
Installation	47	59
Removal	38	53
Steering gear:		
Installation	65	68
Removal	26	43
Transfer:		
Installation	54	65
Removal	33	46
Winch:		
Installation	73	79
Removal	18	29
Winch drive line:		
Installation	61	66
Removal	29	45
Wheel:		
Installation	60	66
Removal	34	48
Master cylinder:		
Assembly	238	268
Cleaning, inspection, and repair	237	267
Description	226b	248
Disassembly	236	265
Installation	62	67
Removal	28	45
Standards, repair and rebuild	349	412
Muffler:		
Installation	67	69
Removal	24	42
Parts	8	20
Paulin top:		
Cab	323	372
Cargo body	341	402
Pillow block:		
Assembly	225	246
Cleaning, inspection, and repair	224	241
Description	222	240
Disassembly	223	241
Pintle:		
Installation	77	81
Rebuild	289	339
Removal	42	58

	Paragraph	Page
Power plant:		
Installation		
Removal	68	69
Power take-off:	22	37
Accessory drive	142-152	153
Assembly	136-141	145
Data	122	137
Description	121	133
Disassembly	123-128	137
Rebuild of components	129-135	143
Standards, repair and rebuild	344	407
Propeller shafts and universal joints:		
Arrangement of propeller shafts	210	232
Assembly	217	236
Cleaning	216a	234
Description	210-213	232
Disassembly	215	234
Inspection	216b	234
Installation	59	66
Removal	32	46
Propeller shaft, transmission-to-transfer:		
Assembly	221	240
Cleaning, inspection, and repair	220	237
Description	218	237
Disassembly	219	237
Rear axle (<i>See</i> Axles, rear)		
Rear spring suspension (<i>See</i> Spring suspension, rear)		
Riveting (frame)	288d	338
Scope (of manual)	1	1
Seats, cab	324	375
Shaft, propeller (<i>See</i> Propeller shafts and universal joints)		
Sheet metal	329	384
Special tools and equipment	10	20
Specifications, torque wrench	357	422
Spring suspension:		
Front:		
Description	267	315
Inspection	269	316
Repair	270-272	317
Shock absorbers	273-277	321
Spring installation	47	59
Spring removal	38	53
Standards, repair and rebuild	354	418
Rear:	279	331
Data	278	329
Description	281	332
Inspection		
Main spring:		
Installation	49	60
Removal	39	54
Repair	282	332
Secondary spring:		
Installation	48	60
Removal	40	54

	Paragraph	Page
Spring suspension—Continued		
Rear—Continued	283	332
Spring seat shaft replacement		
Shock absorbers:	277	326
Assembly	276	324
Cleaning and inspection	273	321
Construction	275	323
Disassembly	52	63
Installation	274	322
Operation	35	48
Removal		
Standard, repair and rebuild:	345	407
Accessory drive, power take-off	346	407
Axle, front		
Brake, parking:		
Electric	352	415
Mechanical	351	414
Brakes, service	348	412
Differential, axle	347	411
Master cylinder	349	412
Power take-off	344	407
Spring suspension, front	354	418
Steering gear	353	415
Torque wrench specifications	357	422
Transfer	343	403
Wheel cylinders	350	412
Winch	355	418
Winch drive line	356	418
Steering gear:		
Adjustments	264	311
Assembly	263	306
Cleaning	261	301
Data	258	295
Description	257	293
Disassembly	268	316
Inspection and repair	262	301
Installation	65	68
Removal	26	43
Standards, repair and rebuild	353	415
Steering knuckle support:		
Bearing adjustment	186d	203
Inspection	172	189
Installation	186e	203
Removal	161	182
Repair	173	191
Steering wheel:		
Installation	263k	311
Removal	259c	296
Tank, fuel:		
Installation	76	80
Removal	23	40
Tie rod, front axle:		
Assembly	184	200
Cleaning	182	200

Tie rod, front axle—Continued

	Paragraph	Page
Disassembly.....	181	200
Installation.....	189	206
Inspection.....	183	200
Removal.....	160	182
Tools:		
Common.....	9	20
Special.....	10	20
Torque rods:		
Front:		
Description.....	267c	315
Inspection.....	269g	317
Repair.....	272	320
Rear:		
Description.....	278d	321
Inspection.....	281c	332
Torque wrench specification.....	357	422
Transfer:		
Assembly of transfer from subassemblies.....	114-120	126
Data.....	82	89
Description.....	81	84
Disassembly into subassemblies.....	83-91	89
Installation.....	54	65
Rebuild:		
Case and covers.....	112, 113	125
Forward rear axle output shaft components.....	104-106	115
Front axle output shaft components.....	101-103	110
Idler shaft components.....	107-109	118
Input shaft and components.....	92-94	99
Output gear bearing retainer and components.....	98-100	107
Output gear and components.....	95-97	103
Shifting mechanism.....	110, 111	123
Removal.....	33	46
Standards, repair and rebuild.....	343	403
Trouble shooting:		
Bent brake backing plate.....	14	27
Excessive front axle caster.....	12	27
Incorrect front wheel alinement.....	13	27
Purpose.....	11	27
Turning angle, front wheel.....	155	174
Universal joint (See Propeller shafts and universal joints)		
Valve, electric parking brake:		
Assembly.....	252	281
Cleaning and inspection.....	251	280
Disassembly.....	250	280
Operation.....	248	278
Standards, repair and rebuild.....	352	415
Testing.....	249	280
Welding:		
Cargo body.....	339	400
Frame.....	288e	338

	Paragraph	Page
Wheel cylinders:	241	270
Assembly.....	240	270
Cleaning, inspection, and repair.....	226d	249
Description.....	239	270
Disassembly.....	350	412
Standards, repair and rebuild.....		
Wheels:	60	66
Installation.....	34	48
Removal.....		
Wheels and hubs:	256f	291
Bearing adjustment.....	254	286
Data.....	253	283
Description.....	256	287
Hubs and bearings, rebuild.....	255	286
Wheels, rebuild.....		
Winch:	313-315	362
Assembly of winch from subassemblies.....	299	348
Data.....	298	346
Description.....	300-302	348
Disassembly into subassemblies.....	73	79
Installation.....		
Rebuild:		
Drive system.....	316-319	365
Drum.....	311, 312	362
End frame.....	303-305	352
Gear case and automatic brake.....	306-310	355
Removal.....	18	29
Standards, repair and rebuild.....	355	418
Winch drive system:		
Installation.....	61	66
Rebuild.....	316-319	365
Removal.....	29	45
Standards, repair and rebuild.....	356	418
Windshield:		
General.....	333	391
Replacement of windshield components.....	334	391
Wrench, torque, specifications.....	357	422



